

SAMSUNG

Simple User Guide

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at www.samsung.com
Model _____ Serial No. _____

Figures and illustrations in this Simple User Guide are provided for reference only and may differ from the actual product appearance.
Product design and specifications may change without notice.


Contact Samsung Support If you have any questions relating to Samsung products, please contact the Samsung customer care center via https://www.samsung.com/tr/support/#contact	
Samsung Service Centre 	Website
444 7711	www.samsung.com/tr/support



BN68-23869R-01

© 2026 Samsung Electronics Co., Ltd. All rights reserved.

Ports

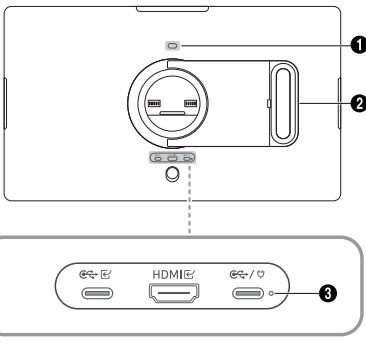

- 1** Camera Port
Connects to a dedicated camera (sold separately) compatible with the product.
- 2** Kick Stand
 - The battery is located inside the kick stand.

-  Connects to a USB device, such as a keyboard or mouse.
- Connects to a source device using a USB Type-C cable.
 - When connecting a USB Type-C source device, make sure to use the USB Type-C 3.1 Gen2 10G cable so that the screen is displayed properly. Lower version cables do not support the video input function (Displayport ALT).

HDMI 
Connects to a source device using an HDMI cable.

- It is recommended to use the HDMI cable provided as components. If not provided, be sure to use authorised cable for HDMI cable connections.

-  Connects to a USB device, such as a keyboard or mouse.
- Used when charging the product. Fast charging at 65 W or higher is possible when charging with a PD adapter. (45 W or higher if using a PD battery).

- 3** Battery charging indicator
Shows the battery charging status.
- State-of-charge level by LED colour
 - Full charging :
0 ~ 79 % Red / 80 ~ 94 % Yellow / 95 ~ 100 % Green
 - Charging in battery protection mode (charging limit: 85%) :
0 ~ 64 % Red / 65 ~ 79 % Yellow / 80 ~ 85 % Green

Before Reading This Simple User Guide

This Product comes with this Simple User Guide and an embedded User guide.
 > left directional button >  **Settings** > **Support** > **Tips and User Guides** > **Open User guide**
On the website (www.samsung.com), you can download the manuals and see its contents on your PC or mobile device.

Warning! Important Safety Instructions

Please read the Safety Instructions before using your Product.
Refer to the table below for an explanation of symbols which may be on your Samsung product.

CAUTION	
RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.	
	This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.
	This symbol indicates that this product has included important literature concerning operation and maintenance.
	Class II product: This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a power cord, the product MUST have a reliable connection to protective earth (ground).
	AC voltage: Rated voltage marked with this symbol is AC voltage.
	DC voltage: Rated voltage marked with this symbol is DC voltage.
	Caution. Consult instructions for use: This symbol instructs the user to consult the Simple User Guide for further safety related information.

Power

- Do not overload wall outlets, extension cords, or adapters beyond their voltage and capacity. It may cause fire or electric shock. Refer to the power specifications section of the manual or the power supply label on the product for voltage and amperage information.
- Power-supply cords should be placed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at the plug end, at wall outlets, and at the point where they exit from the appliance.
- Never insert anything metallic into the open parts of this apparatus. This may cause electric shock.
- To avoid electric shock, never touch the inside of this apparatus. Only a qualified technician should open this apparatus.
- Be sure to plug in the power cord until it is firmly seated. When unplugging the power cord from a wall outlet, always pull on the power cord's plug. Never unplug it by pulling on the power cord. Do not touch the power cord with a wet body part.
- If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorised dealer or Samsung Service Centre.
- To protect this apparatus from a lightning storm, or to leave it unattended and unused for a long time, be sure to unplug it from the wall outlet and disconnect the antenna or cable system.
 - Accumulated dust can cause an electric shock, an electric leakage, or a fire by causing the power cord to generate sparks and heat or by causing the insulation to deteriorate.
- Use only a properly grounded plug and wall outlet.
 - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- To turn off this apparatus completely, disconnect it from the wall outlet. To ensure you can unplug this apparatus quickly if necessary, make sure that the wall outlet and power plug are readily accessible.

Installation

- Do not place this apparatus near or over a radiator or heat register, or where it is exposed to direct sunlight.
- Do not place any objects (vases etc.) containing water on this apparatus, as this can result in a fire or electric shock.
- Do not expose this apparatus to rain or moisture.
- Be sure to contact an authorised Samsung Service Centre for information if you intend to install your Product in a location with heavy dust, high or low temperatures, high humidity, chemical substances, or where it will operate 24 hours a day such as in an airport, a train station, etc. Failure to do so may lead to serious damage to your Product.
- Do not expose this apparatus to dripping or splashing.

Safety Precaution



Caution: Pulling, pushing, or climbing on the Product may cause the Product to fall. In particular, do not hang on or destabilise the Product. This action may cause the Product to tip over, causing serious injuries or death. Follow all safety precautions provided in the Safety Flyer included with your Product. For added stability and safety, you can purchase and install the anti-tip device, referring to "Preventing the Product from falling."



WARNING: Never place a Product set in an unstable location. The Product set may fall, causing serious personal injury or death. Many injuries can be avoided by taking simple precautions such as:

- Always use cabinets or stands or mounting methods recommended by Samsung.
- Always use furniture that can safely support the Product set.
- Always ensure the Product set is not overhanging the edge of the supporting furniture.
- Always educate about the dangers of climbing on furniture to reach the Product set or its controls.
- Always route cords and cables connected to your Product so they cannot be tripped over, pulled or grabbed.
- Never place a Product set in an unstable location.
- Never place the Product set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the Product set to a suitable support.



- Never place the Product set on cloth or other materials that may be located between the Product set and supporting furniture.
 - Never place items that might tempt to climb, such as toys and remote controls, on the top of the Product or furniture on which the Product is placed.
- If the existing Product set is going to be retained and relocated, the same considerations as above should be applied.
- When you have to relocate or lift the Product for replacement or cleaning, be sure not to pull out the stand.

Operation

- This apparatus uses batteries. In your community, there might be environmental regulations that require you to dispose of these batteries properly. Please contact your local authorities for disposal or recycling information.
- Store the accessories (remote control, batteries, or etc.) in a location safely out of the reach.
- Do not drop or strike the product. If the product is damaged, disconnect the power cord and contact a Samsung Service Centre.
- Do not dispose of remote control or batteries in a fire.
- Do not short-circuit, disassemble, or overheat the batteries.
- CAUTION:** There is danger of an explosion if you replace the batteries used in the remote with the wrong type of battery. Replace only with the same or equivalent type.
- WARNING** - Do not use liquid fumigators containing chemicals, such as mosquito repellent or air freshener, around the product.
 - If steam comes in contact with the product surface or enters the product, it may cause stains or malfunction.
- WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES AND OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.**
- Do not place or store the product on an inclined surface.
 - If the product falls, the impact may damage the product and floor and cause the product to malfunction.
- Do not use the product outdoors with the Moving Stand attached.
 - If you move the product outdoors using the wheels, the product may fall over or the product bottom may be scratched, resulting in damage.

- When moving the product on an uneven floor or on a carpet or rug, be careful not to tip it over.
 - Friction with the floor surface may cause the product to fall over and become damaged.
 - The Moving Stand has wheels that may cause marks or damage depending on the floor material. For flooring that is prone to damage, please use protective pads.
- ⚠ Caution:** This product is designed for use with the supplied Samsung Moving Stand. If used with other stands, it may become unstable, fall and cause injury.

Caring for the Product

- To clean this apparatus, unplug the power cord from the wall outlet and wipe the product with a soft, dry cloth. Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, air fresheners, lubricants, or detergents. These chemicals can damage the appearance of the Product or erase the printing on the product.
- The exterior and screen of the Product can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches.
- Do not spray water or any liquid directly onto the Product. Any liquid that goes into the product may cause a failure, fire, or electric shock.

01 What's in the Box?

Make sure the following items are included with your Product. If any items are missing, contact your dealer.

- Simple User Guide
- Power Cord
- *Samsung Smart Remote
- USB Type-C Cable

*: Some of the items specified above may not be included in the package, depending on the model.
The items' colours and shapes may vary depending on the models.
Cables not included can be purchased separately.
Check for any accessories hidden behind or in the packing materials when opening the box.


02 Initial Setup

When you turn on your Product for the first time, it immediately starts the Initial Setup. Follow the instructions displayed on the screen and configure the Product's basic settings to suit your viewing environment.

- You will need a Samsung Account to access our network-based smart services. If you choose not to log in, you will only get a connection to external devices, such as HDMI.

Using the Product Controller

- The Product shape may differ depending on the model.

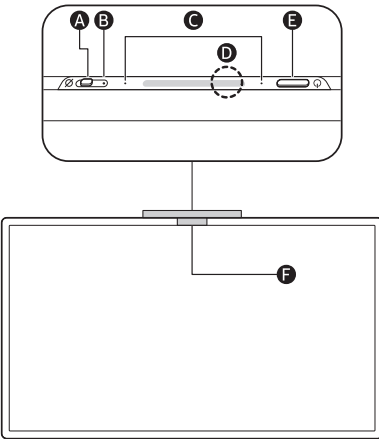

- 1** Microphone switch : You can turn on or off the microphone. If microphone is turned off, All voice and sound features using microphone are not available.
 - During analysis using data from the microphone, the data is not saved.
- 2** Microphone LED
- 3** Microphone
- 4** Eco Sensor
- 5** Power button 
 - You can turn on or off the Product.
 - When the product is turned on, tap the **5** button to display the **Power off** menu. Select the menu item you want from among **Power off**, **Battery Rest Mode**, and **Restart**. To use Mobile Remote, scan the QR Code.
 - If you press the **5** button for more than 2 seconds, the product turns off. If you press and hold it for more than 7 seconds, the product restarts.
- 6** LED Indicator / Remote control sensor

Charging the battery

This product has a built-in battery, allowing users to conveniently use it for a certain period of time without having to connect to a power source.

Battery status indication

Check the status of your device from the status bar at the top right of the screen.

- This option appears when the **Home**, **Game**, **Daily Board**, or **Art** screen opens, and disappears after a while.

Notes

- Fully charge the battery before turning on the product for the first time after purchase.
- Full battery charging time is approximately 3 hours if the power cable is connected and the product is in standby mode, and is approximately 3 hours and 30 minutes if the product is operating.
- During video playback that meets IEC62087 standard, the battery life is up to 3 hours when Eco mode and factory default volume are in use, the input source is set to HDMI, and **Battery Saving** is in the **ON** state. Battery life may differ, depending on product usage conditions.
- If the product is turned off using **Battery Rest Mode**, it can only be turned on by pressing the power button on the product. Some features, such as **Daily Board** and **Mobile Remote**, are restricted.
- If the battery temperature increases, the product may automatically turn off to protect the battery.
- The battery will not charge if stored below 0 °C (32 °F) or above 50 °C (122 °F). Charge the battery after storing it at room temperature for a sufficient period of time.
 - Store the battery indoors at temperatures between 0 °C and 40 °C (32 °F and 104 °F).



- The battery is for this product only. Do not use it with other appliances or for other purposes.
- Using a non-genuine battery may cause the product to malfunction.
- To replace the battery, please contact a Samsung Service Centre for assistance.
- If a problem occurs with the battery, please contact the nearest Samsung Service Centre for assistance. Do not disassemble the battery.
- The battery capacity decreases over time, and this is not a product defect.

The Product won't turn on.

- Make sure that the power cord is securely plugged into the product and the wall outlet.
- Make sure that the wall outlet is working and the remote control sensor at the top of the Product is lit and glowing a solid red.
- Make sure the power plug is plugged in.
- If the battery has discharged, please charge it by connecting the power cord.
- If the battery temperature is too high or too low, the product will not turn on. Let the battery stabilize at room temperature for a while before turning on the product.
- Try pressing the **Product Controller** button at the top of the Product to make sure that the problem is not with the remote control. If the Product turns on, refer to "The remote control does not work."

The remote control does not work.

- Check if the remote control sensor at the top of the Product blinks when you press the **5** button on the remote control.
 - When the remote's battery is discharged, charge the battery using the USB charging port (C-type), or turn over the remote to expose the solar cell to light.
- Try pointing the remote directly at the Product from 1.5-1.8 m away.
- If your Product came with a Samsung Smart Remote (Bluetooth Remote), make sure to pair the remote to the Product. To pair a Samsung Smart Remote, press the **5** and **6** buttons together for 3 seconds.

Eco Sensor and screen brightness

Eco Sensor adjusts the brightness of the Product automatically. This feature measures the light in your room and optimises the brightness of the Product automatically to reduce power consumption. If you want to turn this off, go to  > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Power and Energy Saving** > **Brightness Optimization**.

- The eco sensor is located at the top of the Product. Do not block the sensor with any object. This can decrease picture brightness.

Decreasing power consumption

When you shut the Product off, it enters Standby Mode. In Standby Mode, it continues to draw a small amount of power. To decrease power consumption, unplug the power cord when you don't intend to use the Product for a long time.

04 Specifications and Other Information

Specifications

Display Resolution
2560 x 1440 @ 120 Hz
Sound (Output)
10 W (5 W x 2)
Operating Temperature
0 °C to 40 °C (32 °F to 104 °F)
Operating Humidity
10 % to 80 %, non-condensing
Storage Temperature
-20 °C to 45 °C (-4 °F to 113 °F)
Storage Humidity
5 % to 95 %, non-condensing

Notes

- This device is a Class B digital apparatus.
- To view the product label, open the Cover of the Kick Stand. The label is attached inside.
 - For the power supply type, view the power port at the bottom of the Moving Stand.
- The images and specifications of the Unpacking and Installation Guide may differ from the actual product.
- For detailed device specifications, visit the Samsung website.
- This product does not support a waterproof or dustproof function.
- Please visit samsung.com/support to find further information about external power adapter and remote control associated with EU Ecodesign directive - ErP regulation


An administration fee may be charged in the following situations:
(a) An engineer is called out at your request, but it is found that the product has no defect (i.e., where the user manual has not been read).
(b) You bring the unit to the Samsung service centre, but it is found that the product has no defect (i.e., where the user manual has not been read).

You will be informed of the administration fee amount before a technician visits.

Following the repair by a non-authorised service provider, self-repair or non-professional repair of the product, Samsung is not liable for any damage to the product, any injury or any other product safety issue caused by any attempt to repair the product which does not carefully follow these repair and maintenance instructions. Any damage to the product caused by an attempt to repair the product by any person other than a Samsung certified service provider will not be covered by the warranty.

Hereby, Samsung declares that this radio equipment is in compliance with Directive 2014/53/EU and the relevant UK statutory requirements. The full text of the declaration of conformity is available at the following internet address: <http://www.samsung.com> go to Support and enter the model name. This equipment may be operated in all EU countries and in the UK. The 5 GHz function of this equipment may only be operated indoors.

RF max transmitter power :
100 mW at 2.4 GHz - 2.4835 GHz,
200 mW at 5.15 GHz - 5.25 GHz,
100 mW at 5.25 GHz - 5.35 GHz & 5.47 GHz - 5.725 GHz

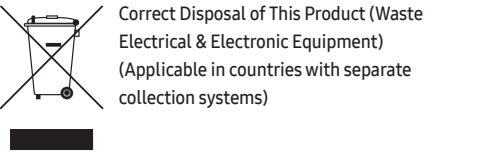

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

SAMSUNG

Kolay Kullanım Kılavuzu

Bu Samsung ürününü satın aldıgınız için teşekkürler.

Daha kapsamlı bir hizmet almak için lütfen ürününüzü www.samsung.com adresinden kaydedin Model Seri No.

Bu Kolay Kullanım Kılavuzundaki şekiller ve çizimler yalnızca referans amaçlıdır ve gerçek ürün görünümünden farklı olabilir. Ürün tasarımı ve teknik özellikler haber verilmeden değiştirilebilir.

Samsung Destek İletişim Bilgileri Samsung ürünleri ile ilgili soru ve talepleriniz için http://www.samsung.com/tr/support/#contact sayfasıdan Samsung çağrı merkezine ulaşabilirsiniz.	
Samsung Servis Merkezi 📍	Web Sitesi
444 7711	www.samsung.com/tr/support

Bu Kolay Kullanım Kılavuzunu Okumadan Önce

Bu ürün, bu Kolay Kullanım Kılavuzuyla ve ürünün içindeki kullanım kılavuzuyla birlikte gelir.

🏠 > sol çift yönlü düğme > ⚙️ **Ayarlar** > **Destek** > **İpuçları ve Kullanıcı Kılavuzları** > **Kullanıcı kılavuzunu aç**

Web sitesi (www.samsung.com) üzerinden kılavuzları indirebilir ve içeriklerinizi bilgisayarınızda veya mobil cihazınızda görüntüleyebilirsiniz.

Uyarı! Önemli Güvenlik Yönergeleri

Ürününüzü kullanmadan önce Lütfen Güvenlik Yönergelerini okuyun. Samsung ürününüzde görebileceğiniz sembollerin açıklamaları için aşağıdaki tabloya başvurun.

DİKKAT	
ELEKTRİK ÇARPMASI RİSKİ. AÇMAYIN.	
DİKKAT: ELEKTRİK ÇARPMA RİSKİNİ AZALTMAK İÇİN, KAPAĞI (VEYA ARKASINI) ÇIKARMAYIN. İÇ KISIMDA KULLANICIİN SERVİS VEREBİLECEĞİ PARÇA YOKTUR. TÜM SERVİS İŞLEMLERİNDE KALİFİYE PERSONELE BAŞVURUN.	
	Bu sembol, içinde yüksek voltaj olduğunu gösterir. Bu ürünün içindeki parçalarla herhangi bir temasta bulunmak tehlikelidir.
	Bu sembol, bu ürünl e çalışma ve bakıma ilişkin önemli literatür verildiğini gösterir.
	Sınıf I ürün: Bu sembol, elektrik topraklamasına (toprak) bir güvenlik bağlantısı gerektmediğini gösterir. Güç kablosu bulunan bir ürünün üzerinde bu sembol yoksa, ürünün koruyucu topraklamaya güvenli şekilde bağlanması ZORUNLUDUR.
	AC voltajı: Bu sembolle işaretlenen nominal voltaj AC voltajıdır.
	DC voltajı: Bu sembolle işaretlenen nominal voltaj DC voltajıdır.
	Dikkat. Kullanım talimatlarına bakın: Bu sembol, kullanıcıya güvenlikle ilgili daha fazla bilgi için Kolay Kullanım Kılavuzu belgesine başvurmasını söyler.

Güç

- Duvar prizlerine, uzatma kablolarına veya adaptörlere voltaj ve kapasitesinin üzerinde aşırı yük bindirmeyin. Bu durum yangına veya elektrik çarpmasına neden olabilir. Voltaj ve amper bilgileri için kılavuzun güç teknik özellikleri bölümüne veya ürünün üzerindeki güç kaynağı etiketine bakın.
- Güç kabloları üzerine basılmayacak ya da eşyalar tarafından kısırılmayacak şekilde yerleştirilmelidir. Kabloların fişli ucuna, duvardaki elektrik prizlerine ve tesisat çıkış noktasına özellikle dikkat edin.
- Bu cihazın açık bölümlerine kesinlikle metal cisim sokmayın. Bu, elektrik çarpmasına neden olabilir.
- Elektrik çarpmasını önlemek için, cihazın içine asla dokunmayın. Bu cihazı yalnızca yetkili teknisyenler açmalıdır.
- Güç kablosunu elektrik prizinden çıkarırken her zaman güç kablosunu fişinden tutarak çekin. Güç kablosundan çekerek çıkarmayın. Güç kablosuna vücudunuzun ıslak yerleriyle dokunmayın.
- Cihaz düzgün çalışmıyorsa (özellikle alışıldık ses veya koku geliyorsa) derhal fişini çekin ve yetkili satıcıya veya Samsung Servis Merkezi'ne başvurun.
- Bu cihazı yıldırımlı havalarda korumak için ya da uzun süre kullanmı dışı veya gözetimsiz bırakacağınız zamanlarda mutlaka prizden çekin ve anteni veya kablo sistemini çıkarın.
 - Biriken toz güç kablosunun kivilcım çıkmasına veya ısınmasına ya da yalıtımın bozulmasına neden olarak elektrik çarpmasına, elektrik kaçağına veya yangına yol açabilir.
- Yalnızca uygun şekilde topraklanmış fiş ve priz kullanın.
 - Topraklamanın düzgün olmaması elektrik çarpmasına veya ekipmanın zarar görmesine neden olabilir. (Yalnızca Class I Ekipman.)
- Bu cihazı tamamen kapatmak için elektrik prizinden çekin. Gerektiğinde bu cihazın fişini hızlı bir şekilde çekebilmeniz için, elektrik prizinin ve fişinin kolayca erişilebilir olduğundan emin olun.

Kurulum

- Bu cihazı radyatör veya ısıtıcı üzerine veya yakınına ya da doğrudan güneş ışığı alan yerlere yerleştirmeyin.
- Bu cihazın üzerine vazo gibi, su içeren nesneler koymayın; bu yangına veya elektrik çarpmasına neden olabilir.
- Bu cihazı yağmura veya neme maruz bırakmayın.
- Ürününüzü yoğun toz, yüksek veya düşük sıcaklık, yüksek nem veya kimyasal madde bulunan yerlere ya da havalandırma tren istasyonu gibi düzenli 24 saat çalışacağı bir yere kurmayı düşünmüyorsanız, bilgi için yetkili Samsung Servis Merkezi'ne başvurmayı unutmayın. Bunu yapmazsanız, ürününüz ciddi zarar görebilir.
- Bu cihazı suya batırmayın veya su sıçratmayın.

Güvenlik Önlemi



Dikkat: Ürünün çekilmesi, itilmesi veya üzerine tırmanılması Ürünün düşmesine neden olabilir. Ürüne asılmamaya ve ürünün dengesini bozmamaya özellikle dikkat edin. Bu eylem, Ürünün devrilmesine yol açarak ciddi yaralanmalara veya ölüme neden olabilir. Ürününüzle birlikte verilen Güvenlik Broşüründe belirtilen tüm güvenlik önlemlerine uyun. Daha fazla sağlamlık ve güvenlik için devrime önleyici cihaz satın alıp takabilirsiniz. Bunun için bkz. "Ürünün düşmesini önleme."



UYARI: Ürün setini sağlam olmayan bir yere asla yerleştirmeyin. Ürün seti düşerek ciddi yaralanmalara veya ölüme neden olabilir.

Aşağıdaki gibi basit önlemler alarak birçok yaralanmayı önleyebilirsiniz:

- Daima Samsung tarafından önerilen üniteleri, sehpaları veya montaj yöntemlerini kullanın.
- Daima Ürün setini güvenli bir şekilde destekleyebileceک mobilyalar kullanın.
- Ürün setinin, destekleyen mobilyanın kenarından sarkmadığından daima emin olun.
- Ürün setine veya kumandalarına ulaşmak için mobilyaların üzerine tırmanmanın tehlikeleri konusunda daima bilgi verin.
- Ürününüze bağlı kabloları daima takılıp düşme, çekme veya el ile tutma ihtimali olmayacak şekilde yerleştirin.
- Ürün setini sağlam olmayan bir yere asla yerleştirmeyin.
- Hem mobilyayı hem de Ürün setini uygun bir desteye sabitlemediğiniz sürece, Ürün setini asla yüksek mobilyaların (örneğin dolaplar veya kitaplıklar) üzerine yerleştirmeyin.

- Ürün seti ile destekleyici mobilya arasına asla örtü veya başka bir malzeme sermeyin.
- Ürünün üzerine veya Ürünün yerleştirildiği mobilyanın üzerine, oyuncaklar ve uzaktan kumandalar gibi tırmanmaya teşvik edebilecek nesneleri asla yerleştirmeyin.
- Mevcut Ürün seti olduğu gibi başka bir yere taşınacaksa, yukarıdaki hususlar aynı şekilde uygulanmalıdır.
- Değişim veya temizlik için ürünün yerini değiştirmeniz veya kaldırmanız gerektiğinde, standı çekerek çıkarmamaya özen gösterin.

Çalışma

- Bu cihaz pil kullanır. Yaşadığınız yerde, pillerin uygun şekilde atılmasını gerektiren çevreye ilgili düzenlemeler olabilir. Atma ve geri dönüşümle ilgili bilgileri için lütfen bölgenizdeki yetkililere başvurun.
- Aksesuarları (uzaktan kumanda, piller vb.) ulaşılamayacak güvenli bir yerde saklayın.
- Ürünü düşürmeyin ve Ürüne vurmayın. Ürün hasar görürse, güç kablosunu çıkarın ve Samsung Servis Merkezi'ne başvurun.
- Uzaktan kumandayı veya pilleri ateşe atmayın.
- Pilleri kısa devre yapmayın, parçalamayın veya aşırı ısıya maruz bırakmayın.
- DİKKAT:** Uzaktan kumanda kullanılan piller yanlış tip pille değiştirilirse patlama riski vardır. Yalnızca aynı veya eşdeğer tipte değiştirin.
- UYARI - Ürünün çevresinde sinek kovucu gibi böcek ilaçları veya oda spreyi gibi kimyasallar içeren sıvı püskürtücü ürünler kullanmayın.
 - Buharım ürün yüzeyine temas etmesi veya ürüne girmesi, lekelere ya da arızalara neden olabilir.
- UYARI - ATEŞİN YAYILMASINI ÖNLEMEK İÇİN MUMLARI VE AÇIK ALEV YAYAN DİĞER EŞYALARI HER ZAMAN BU ÜRÜNDEN UZAK TUTUN. 
- Ürünü eğimli bir yüzeye yerleştirmeyin veya eğimli bir yüzeyde saklamayın.
 - Ürün düşerse, çarpma sonucunda ürün ve zemin zarar görebilir ve ürün arızalanabilir.
- Hareketli Stand takılıyken ürünü dış mekanlarda kullanmayın.
 - Dış mekanlarda ürünü tekerleklerle hareket ettirirsiniz ürün devrilebilir veya ürünün alt kısmı çizilecek hasar görebilir.

04 Teknik Özellikler ve Diğer Bilgiler

Teknik Özellikler

Ekran Çözünürlüğü
2560 x 1440 @ 120 Hz
Model Adı
UE27LSM7FAX
Ses (Çıkış)
10 W (5 W x 2)
Çalışma Sıcaklığı
0°C ila 40°C (32°F ila 104°F) arası
Çalışma Nemi
%10 ila %80 arası, yoğunlaşmayan
Saklama Sıcaklığı
-20 °C ila 45 °C (-4 °F ila 113 °F) arası
Saklama Nemi
%5 ila %95 arası, yoğunlaşmayan

- Notlar**
- Bu aygıt Sınıf B dijital cihazdır.
 - Ürün etiketini görmek için Açılır Standın Kapağını açın. Etiket i içeride bulabilirsiniz.
 - Güç kaynağı türünü öğrenmek için Hareketli Standın altındaki güç bağlantı noktasına bakın.
 - Paket Açma ve Kurulum Kılavuzundaki görseller ve teknik özellikler gerçek üründen farklı olabilir.
 - Cihazın ayrıntılı teknik özellikleri için Samsung web sitesini ziyaret edin.
 - Bu üründe su geçirmez veya toz geçirmez çalışma desteği yoktur.
 - AB Eko Tasarım Direktifi - ErP Düzenlemesi ile ilişkili olarak harici güç adaptörü ve uzaktan kumanda hakkında daha fazla bilgi için lütfen samsung.com/support adresini ziyaret edin.

Eko Sensörü ve ekran parlaklığı

Eko Sensörü, Ürünün parlaklığını otomatik olarak ayarlar. Bu özellik, odanızdaki ışık miktarını ölçer ve güç tüketimini azaltmak için Ürünün parlaklığını otomatik olarak optimize eder. Bu özelliği kapatmak istiyorsanız şu menüye gidin: 🏠 > sol çift yönlü düğme > ⚙️ **Ayarlar** > **Tüm Ayarlar** > **Genel ve Gizlilik** > **Güç ve Enerji Tasarufu** > **Parlaklık Optimizasyonu**.

Eko sensörü, Ürünün üst tarafından bulunur. Sensörün önünü herhangi bir nesneyle kapatmayın. Bu durumda resim parlaklığı azalabilir.

Güç tüketimini azaltma

Ürünü kapattığınızda, Standby Mode etkin olur. Standby Mode etkin olduğunda, ürün az miktarda elektrik tüketmeye devam eder. Güç tüketimini azaltmak amacıyla, Ürünü uzun süre kullanmayacağınız zamanlarda güç kablosunu prizden çekin.

- Ürünü düz olmayan bir zeminde ya da halı veya kilim üzerinde hareket ettirirken, devrilmesine dikkat edin.
 - Zemin yüzeyi ile sürtünme, ürünün devrilmesine ve hasar görmesine yol açabilir.
 - Hareketli Standın tekerlekleri, zemin malzemesine bağlı olarak iz bırakılabilir veya hasara neden olabilir. Hasar görebilecek zemlerin için lütfen koruyucu pedler kullanın.
- ⚠️ **Dikkat:** Bu ürün, birlikte verilen Samsung Hareketli Stand ile kullanılmak üzere tasarlanmıştır. Başka standlarla kullanılması durumunda dengersiz hale gelebilir, düşebilir ve yaralanmalara neden olabilir.

Ürünün Bakımı

- Bu cihazı temizlemek için, güç kablosunu prizden çekin ve ürünü yumuşak ve kuru bir bezle silin. Balmumu, benzen, alkol, tiner, böcek ilacı, oda spreyi, kayganlaştırıcı veya deterjan gibi kimyasal maddeler kullanmayın. Bu kimyasallar Ürünün görünüşüne zarar verebilir veya üzerinde basılı yazıları silebilir.
- Temizlik sırasında Ürünün dış yüzeyi ve ekranı çizilebilir. Çizilmeleri önlemek için dış yüzeyi ve ekranı yumuşak bir bezle dikkatlice silmeye özen gösterin.
- Ürüne doğrudan su veya herhangi bir sıvı püskürtmeyin. Ürüne giren herhangi bir sıvı bir arızaya, yangına veya elektrik çarpmasına yol açabilir.

01 Kutuda neler var?

Ürününüzün yanında aşağıdaki parçaların bulunduğundan emin olun. Eksik parça varsa satıcınıza başvurun.

- Kolay Kullanım Kılavuzu
- Güç kablosu
- *Samsung Smart Remote
- USB Type-C Kablosu

*: Modele bağlı olarak, yukarıda belirtilen öğelerden bazıları pakete dahil olmayabilir.

- Ürünlerin renkleri ve şekilleri modellere bağlı olarak farklılık gösterebilir.
- Kutuya dahil olmayan kablolar ayrı olarak satın alınabilir.
- Kutuyu açarken, ambalaj malzemelerinin arkasında veya içinde gizlenmiş herhangi bir aksesuar olup olmadığını kontrol edin.

İthalatçı Firma
SAMSUNG
Samsung Electronics İst. Paz. ve Tic. Ltd. Şti Defterdar Mah.Otakılar Cad.Sinpaş Flatisis Apt.No:78/46 Eyüp Sultan, İstanbul / Türkiye Tel: +90 212 4670600

Aşağıdaki durumlarda bir yönetim ücreti alınabilir:
(a) Talep etmeniz üzerine bir mühendis çağırılır, ancak üründe hiç arıza olmadığı görülürse (yani, kullanıcı kılavuzu okunmadığında).
(b) Üniteyi Samsung servis merkezine götürdüğünüzde, üründe bir arıza olmadığı görülürse (yani kullanımı kılavuzunun okunmadı anlaşırsa).

Teknisyen ziyaret etmeden önce yönetim ücreti tutarı hakkında bilgilendirileceksiniz.

Yetkisiz bir servis sağlayıcı tarafından yapılan onarım, kullanıcının kendisinin yaptığı onarım veya profesyonel olmayan onarım sonrasında Samsung, bu onarım ve bakım talimatlarına dikkatle uyulmadan ürünü onarmaya yönelik girişimlerden kaynaklanan ürün hasarları, yaralanmalar veya diğer ürün güvenliği sorunlarından sorumlu tutulamaz. Samsung onaylı servis sağlayıcıları dışında herhangi bir kişinin ürünü onarmaya yönelik girişimlerden kaynaklanan ürün hasarları, garanti kapsamında değildir.

Samsung, bu radyo ekipmanının 2014/53/EU Direktifi ve ilgili Birleşik Krallık yasal gerekliliklerine uygun olduğunu beyan eder. Uyumluluk beyanının tam metni aşağıdaki İnternet adresinde bulunur: <http://www.samsung.com> Destek bölümüne gidin ve model adını girin. Bu ekipman, tüm AB ülkelerinde ve İngiltere’de çalıştırılabilir. Bu ekipmanın 5 GHz işlevi yalnızca iç mekanda çalıştırılabilir. RF maks. verici gücü:

100 mW, 2.4 GHz - 2.4835 GHz, 200 mW, 5.15 GHz - 5.25 GHz, 100 mW, 5.25 GHz - 5.35 GHz ve 5.47 GHz - 5.725 GHz



Bu Ürünün Doğru Şekilde Atılması (Atık Elektrikli ve Elektronik Cihazlar)
(Aynı toplama sistemlerine sahip ülkeler içindir)

Ürünün, aksesuarların veya ilgili belgelerin üzerinde bulunan bu işaret, ürünün ve elektronik aksesuarlarının (örn. şarj cihazı, kulaklık, USB kablo) kullanım ömrü sonunda diğer ev atıklarıyla birlikte atılmaması gerektiğini belirtir. Atıkların kontrolsüz olarak imha edilmesinin çevre ve insan sağlığı üzerindeki zararlı etkisini engellemek için lütfen bunu diğer atık türlerinden ayırın ve malzeme kaynaklarının sürdürülebilir şekilde yeniden kullanılabilmesi için geri dönüştürülmesini sağlayın. Ev kullanıcıları, bu ürünü çevresel açıdan güvenli bir geri dönüştürme işlemi için nereye ve nasıl ulaştıracakları hakkında ayrıntılı bilgi için ürünü satın aldıkları bayi ile veya yerel resmi makamlı irtibat kurmalıdır. İç kullanıcıları tedarikçileri ile irtibat kurup satın alma sözleşmesinin hüküm ve koşullarına bakmalıdır. Bu ürün ve ürünün elektronik aksesuarları, imha için diğer ticari atıklarla karıştırılmamalıdır.


02 İlk Kurulum

Ürünü ilk kez açtığınızda İlk Kurulum başlar. Ekranda gösterilen talimatları izleyin ve Ürünün temel ayarlarını, izleme ortamınıza uygun şekilde yapalrdınız.

- ⚡️ Ağ tabanlı akıllı hizmetlerimiz erişmek için bir Samsung Hesabı gerekir. Oturum açmamanız seçerseniz yalnızca HDMI gibi harici cihazlara bağlanabilirsiniz.

Ürün Kumandasını Kullanma

- Ürün şekli, modele bağlı olarak değişiklik gösterebilir.

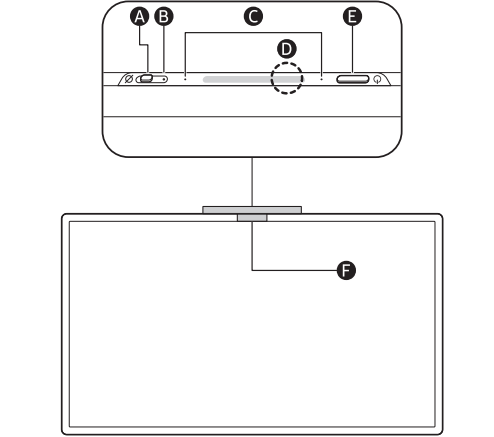

- A** Mikrofon anahtarı: Mikrofonu açabilir veya kapatabilirsiniz. Mikrofon kapalıysa, Mikrofon kullanan hiçbir ses özelliği kullanılamaz.
 - Mikrofondan gelen veriler kullanılarak yapılan analiz sırasında veriler kaydedilmez.

B Mikrofon LED ışığı

C Mikrofon

D Eko Sensörü

E Güç düğmesi


– Ürünü açıp kapatabilirsiniz.

- Ürün açıldığında, **E** düğmesine basarak **Güç Kapalı** menüsünü görüntüleyin. **Güç Kapalı**, **Pil Dinlenme Modu** ve **Yeniden Başlat** arasında istediğiniz menü ögesini seçin. Mobil Uzaktan Kumandayı kullanmak için **QR Kodu** okutun.
- **E** düğmesine 2 saniyeden uzun süre basılı tutarsanız ürün kapanır. 7 saniyeden uzun süre basılı tutarsanız ürün yeniden başlatılır.

F LED Gösterge / Uzaktan kumanda sensörü

© 2026 Samsung Electronics Co., Ltd. All rights reserved.

Bağlantı Noktaları

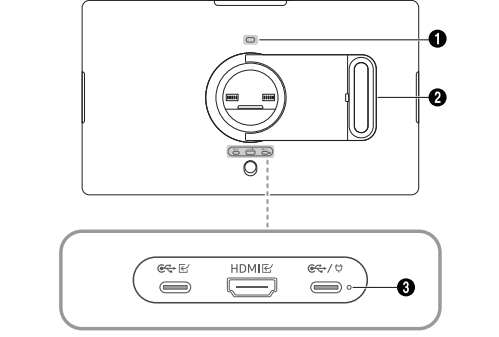

1 Kamera Bağlantı Noktası
Ürünü uyumlu özel bir kameraya (ayrı satılır) bağlanır.

- 2** Açılır Stand
 - Pili, açılır standın içinde yer alır.

🔌

- Klavye veya fare gibi bir USB cihazına bağlanır.
- USB Type-C kablosu kullanarak bir kaynak cihaza bağlanır.
 - Bir USB Type-C kaynak cihazını bağlarken ekranın düzgün görüntülenmesi için USB Type-C 3.1 Gen2 10G kablosunu kullandığınızdan emin olun. Daha düşük sürümlere ait kablolar, video girişi işlevini (Displayport ALT) desteklemez.

HDMI🔌

- HDMI kablosuyla bir kaynak aygıtı bağlanır.
 - Ürüne verilen HDMI kablosunun bileşen olarak kullanılması önerilir. Ürünü birlikte kablo verilmemişse HDMI kablo bağlantıları için kullanacağınız kablounun onaylı olduğundan emin olun.

🔌/🔌

- Klavye veya fare gibi bir USB cihazına bağlanır.
- Ürünü şarj ederken kullanılır. 65 W veya üstü ile hızlı şarj, PD adaptörle şarj edilen mümkündür. (PD pil kullanılıyorsa 45 W veya üstü).
- 3** Pil şarj göstergesi
Pil şarj durumunu gösterir.
- LED rengine göre şarj durumu seviyesi
 - Tam şarj: %0 – 79 Kırmızı / % 80 – 94 Sarı / %95 – 100 Yeşil
 - Pil koruma modunda şarj (şarj sınırı: %85): %0 – 64 Kırmızı / % 65 – 79 Sarı / %80 – 85 Yeşil

Pili şarj etme

Bu üründe, kullanıcıların bir güç kaynağına bağlanmak zorunda kalmadan ürünü belirli bir süre rahatça kullanabilmelerini sağlayan dahili bir pil mevcuttur.

Pil durumu göstergesi

Cihazınızın durumunu ekranın sağ üst köşesindeki durum çubuğundan kontrol edin.

- Bu seçenek **Ana Sayfa**, **Oyun**, **Daily Board** veya **Sanat** ekranı açıldığında görünür ve bir süre sonra kaybolur.

Notlar

- Satın aldıktan sonra ürünü açmadan önce pili tam olarak şarj edin.
- Güç kablosu bağliken ve ürün bekleme modundayken tam pil şarj süresi yaklaşık 3 saat; ürün çalışırken ise yaklaşık 3 saat 30 dakikadır.
- IEC62087 standartında uygun bir video oynatılırken, Eco modu ve varsayılan ses düzeyi kullanılmayken, giriş kaynağı HDMI olarak ayarlıyken ve **Pil Tasarufu** ayarı **AÇIK** konumundayken pil ömrü 3 saate kadardır.

- Pil ömrü, ürün kullanım koşullarına bağlı olarak değişiklik gösterebilir.
- Ürün **Pil Dinlenme Modu** kullanılarak kapatıldysa sadece üründeki güç düğmesine basılarak açılabilir. **Daily Board** ve **Mobil Cihaz Uzaktan Kumandası** gibi bazı özellikler kısıtlanır.
- Pil sıcaklığı artarsa pilin korunması için ürün otomatik olarak kapanabilir.
- 0 °C (32 °F) altında veya 50 °C (122 °F) üstünde saklandıysa pil şarj olmaz. Pili, yeterli bir süre boyunca oda sıcaklığında beklettikten sonra şarj edin.
 - Pili 0 °C ve 40 °C (32 °F ve 104 °F) aralığındaki sıcaklıklarda, iç mekanda saklayın.



- Pil sadece bu ürün içindir. Başka cihazlarla veya başka amaçlarla kullanmayın.
- Orjinal olmayan bir pilin kullanılması, ürünün arızalanmasına yol açabilir.
- Pili değiştireceğiniz zaman lütfen yardım almak için Samsung Servis Merkezi ile iletişime geçin.
- Pilde bir sorun meydana gelirse lütfen yardım almak için en yakın Samsung Servis Merkezi ile iletişime geçin. Pili parçalarına ayırmayın.
- Pil kapasitesi zamanla azalır ve bu bir ürün arızası değildir.